

# **CAUTIONS FOR SAFE OPERATION**

- Do not expose HRX-2000 to rain or moisture. Even if power turned off, dangerous high voltage is always supplied to power terminal. So, Attention to electric shock.
- Cerainly, Be connect the inner plate to earth ground.

# **INPUT POWER SELECTION SWITCH (SW6)**

• Set this switch to 110V or, 220V depending on the input power voltage (J7).

#### PAN/TILT DRIVE VOLTAGE SELECTION SWITCH (SW7)

 Confirm the drive voltage of your Pan/Tilt. driver. This voltage can be selected either AC220V/110V or, AC24V.

(Note) If SW7 is selected to AC220V/110V then, the power supplied to J7 will be used to drive Pan/Tilt

# **POWER INPUT TERMINAL (J7)**

- Connect power cable to L1, L2 and Frame Ground.
- Before turn on the power, confirm the setting state of POWER INPUT SELECTION switch (SW6) again.

### **POWER SWITCH (SW8)**

• Turn on the power after checking the whole wiring states of control lines and power lines.

#### **COMMUNICATION TERMINAL (J8)**

- RS-485, Half-Duplex
- 2400, 4800, 9600bps Selectable (Default : 9600bps)
- 2 WIRE ( Cable: Use TJV\*2C AWG22 or higher spec )
- Max. communication length: Approx. 1.2Km

(485D+),(485D-) line must be connected correctly.

# **CONFIGURATION SWITCH (SW3)**

P1	P2	Controller Selection	
On	Off	When use DVR (HNDR Series)	
Off	On	When use HTX-2000 or, HTX-2500	

P4	P5	Baud Rate	
Off	Off	9600 bps	
On	Off	4800 bps	
Off	On	2400 bps	

# PAN/ TILT/ LENS/ AUX OUTPUT TERMINAL (J2, J3)

- Pan/Tilt drive voltage can be set to the voltage supplied to J7 (AC220V/110V) or, AC24V. Please, confirm PAN/TILT DRIVE VOLTAGE SELECTION switch (SW7) before wiring.
- Same voltage supplied to Receiver Unit outputs to AUX1and 2.
- · Lens drive voltage is DC12V.

#### **FUSE (F1, F2)**

• Use the fuse of AC250V/2A only.

#### **SPECIFICATIONS**

1. Pan/Tilt Output - AC220V/100V or, AC24V RIGHT, LEFT, UP, DOWN, AUTOPAN Relay contact capacity: more than 250VAC/5A

2. Lens Output - DC12V ZOOM, FOCUS

Relay contact capacity: more than 12VDC/1A

3. AUX Output - AC220V/100V

AUX1, AUX2

Relay contact capacity: more than 250VAC/5A

- 4. Zoom camera menu control
- 5. Camera Power DC12V
- 6. Protocol: HSD-251, HSDN-251 Protocol compatible
- 7. Operating environment

Input voltage : AC110V or 220V selectable, 50/60Hz Temperature, Humidity : -18  $^{\circ}$ C~+50  $^{\circ}$ , 10%RH~80%RH

8. Dimensions

Size: 280(W) x 280(D) x 130(H) mm

Weight: Approx. 4Kg

### **ID Setting**

- · Address number of HRX-2000 starts from 01.
- In case of first receiver unit, adjust to SW5→0, SW4→1.

#### **LOCAL TEST**

- With this function, user can check the wiring states and control pan/tilt without controller. If SW2 pushed more than 2 seconds, LED2 will be turned on and, entered local test mode.
- According to Rotary switch setting (SW5, SW4), receiver unit acts as follows. (Ex: SW5→5, SW4→0 then RIGHT)

Code	Function	Code	Function
50	50 RIGHT		WIDE
51	LEFT	60	NEAR
52	UP	61	FAR
53	DOWN	62	AUX1 ON
54	RIGHT-UP	63	AUX1 OFF
55	RIGHT-DOWN	64	AUX2 ON
56	LEFT-UP	65	AUX2 OFF
57	LEFT-DOWN	66	AUTOPAN ON
58	TELE	67	AUTOPAN OFF

(Note) After finished local test, re-set the ID of HRX-2000 and press reset switch (SW1).

