

FI Asennusohje  
 S Installation instruktioner  
 N Installationsinstruktioner  
 DK Installationsinstruktus  
 NL Installatievoorschrift  
 D Montageanweisung  
 F Instructions d'installation  
 ES Instrucciones de montaje  
 I Istruzioni di montaggio

## ML6435B/ML7435E

Electric Linear Actuators  
 for Floating/Modulating Control

### INSTALLATION INSTRUCTIONS

<p>≈ 80 mm</p> <p>≈ 100 mm</p>		<p><b>A1-A9: Installation</b></p> <p>24 Vac 230 Vac</p>
<p><b>A1</b></p>	<p><b>A2</b></p>	<p><b>A3</b></p>
<p><b>A4</b></p> <p>3 mm</p> <p>8 mm</p> <p>1.5 mm<sup>2</sup> max.</p> <p>A5, A6, A7</p>	<p><b>A5</b></p> <p>24 V ~</p> <p>24 V L</p> <p>ML6435B1008</p> <p><b>A6</b></p> <p>230 V ~</p> <p>N 230 V ~</p> <p>P</p> <p>ML6435B1016</p>	<p><b>A7</b></p> <p>0(2)...10 Vdc</p> <p>10 V 10 V</p> <p>0(2)...10 Vdc</p> <p>Y</p> <p>0% 100%</p> <p>24 V L</p> <p>24 V ~</p> <p>ML7435E</p> <p>2...10V 0...10V</p> <p>10 V 10 V</p>

